 
 



Stove Premium

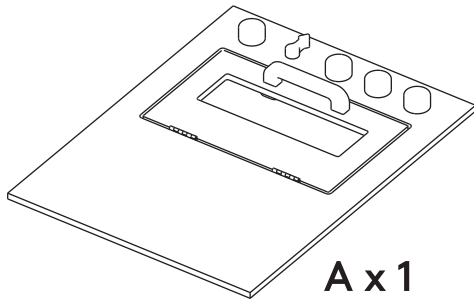


A x 1

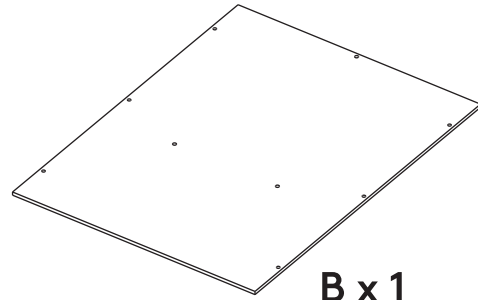

 
B x 1

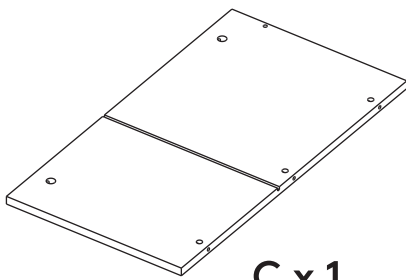


C x 1

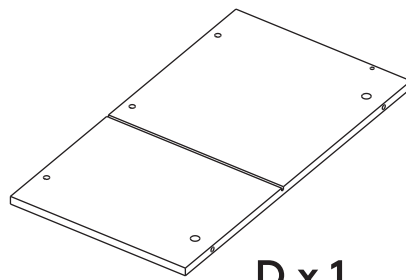 


D x 1

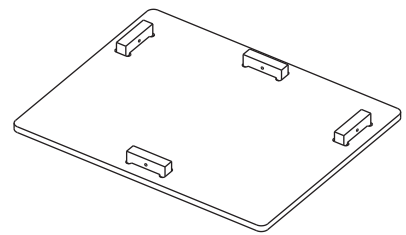 

E x 1

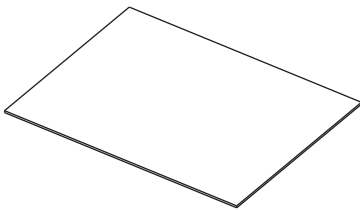 

F x 1

 

G x 2



H x 2



J x 9



 
 
 
K x 4




L x 4

Warning! Adult assembly required. For the safe use of the toy - please make sure to follow all the steps in the instruction carefully to avoid choking hazard with small parts/loose screws after assembly.


1

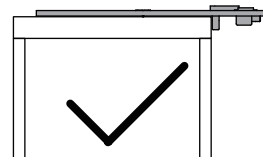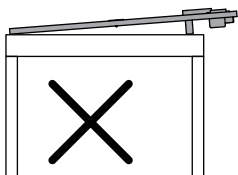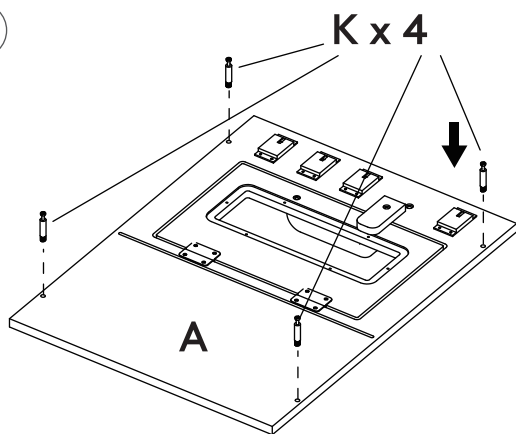


2

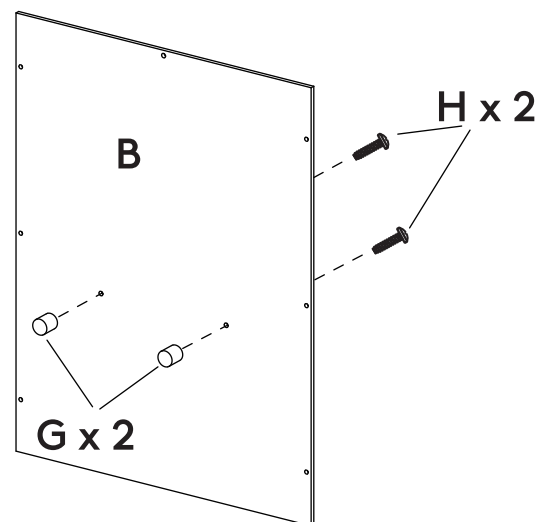 


3

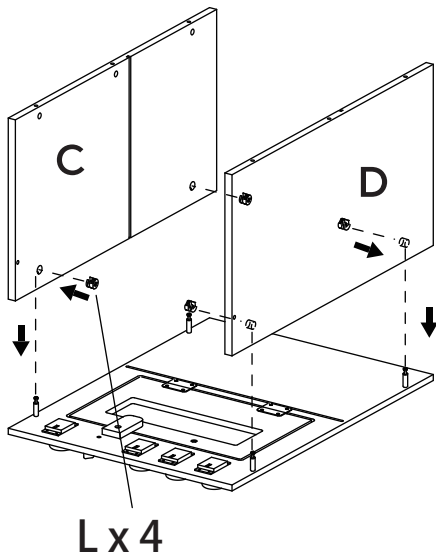 


4

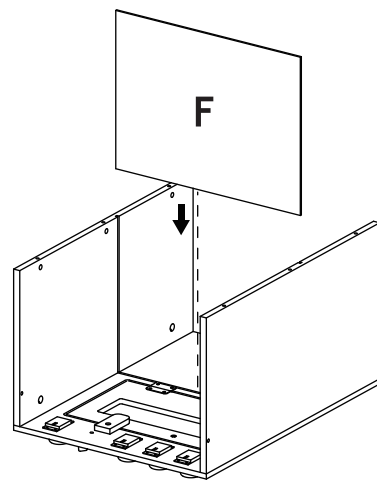 


5

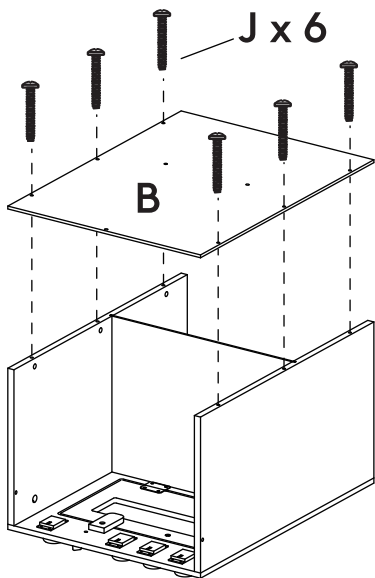 

6

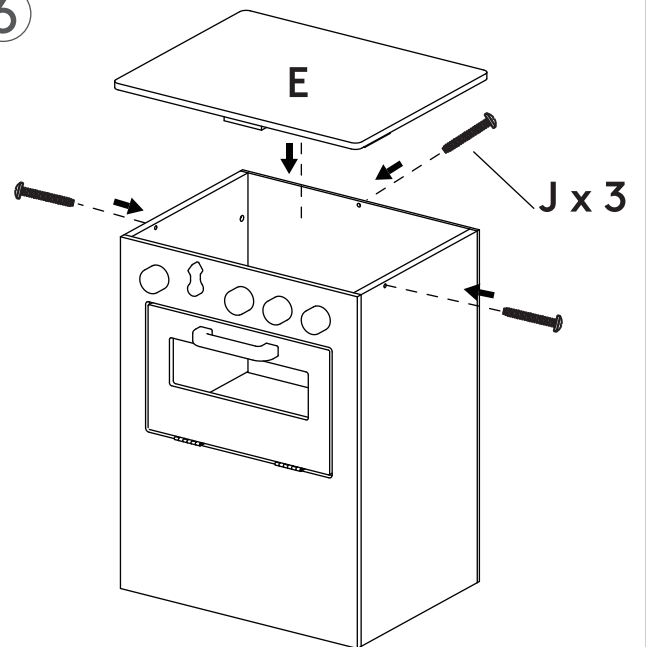 

7

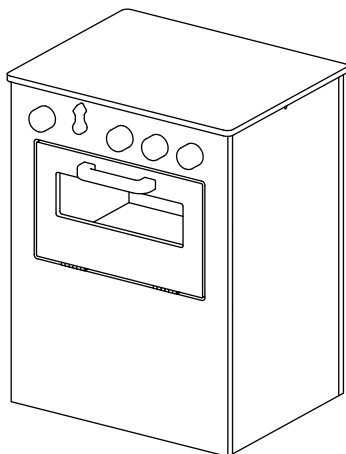 

Head office, Sweden: Micki Leksaker AB
Industrivägen 7 SE-355 73 Gemla
Phone +46 (0)470 704150 E-mail: info@micki.se
mickiofsweden.com