


Assembly Instruction

Item no. 13.1012

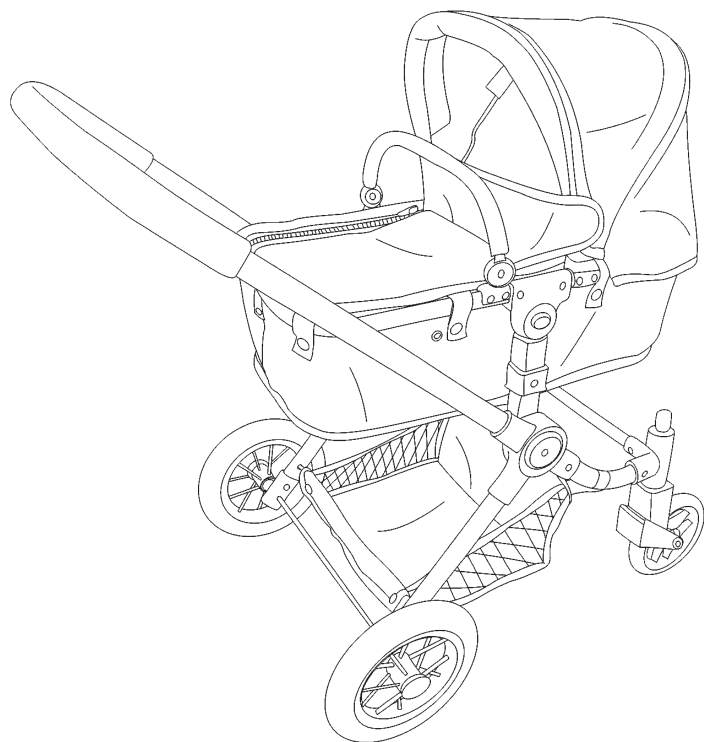


NOTE:


1. This stroller is not suitable for children younger than 3 years old.
2. This item is a toy and it's not suitable for carrying babies, children or pets.
3. Assembly should be carried out by an adult to prevent the item from collapsing during use.
4. Please remove all package before giving this item to your children.

Skrällan[®]


Head office, Sweden: Micki Leksaker AB, Industrivägen 7, SE-355 73 Gemla
Phone +46 (0)470 70 41 50, info@micki.se, www.skrallan.se

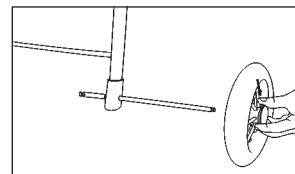


1. Put the axle through the holes on the back of the frame and then put the wheels on the axle by pressing to fix them firmly.

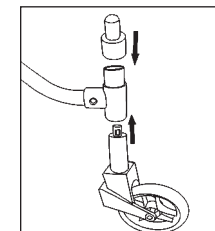


2. Pass the front wheel through the hole of the plastic, then put the clip on the top of the hood pin to fix it, and finally put the plastic cap on above.

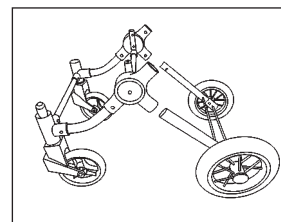


3. Put the rear tube set into the plastic holes on the front tube set until fixed.

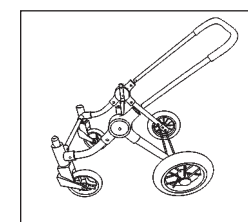


4. Put the handle tube set into the plastic holes on frame base as shown.

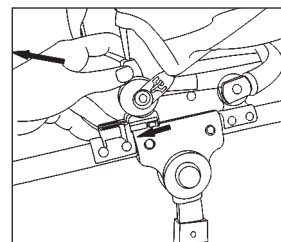

5. Thrill the canopy connectors through the holes located on the seat fabric to fix on the handle, ensure the runners insert in it tightly.

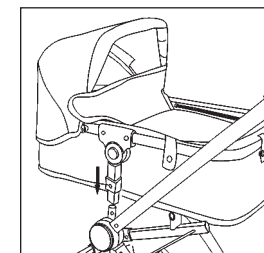

6. Insert the carry cot into the stroller frame until fixed.

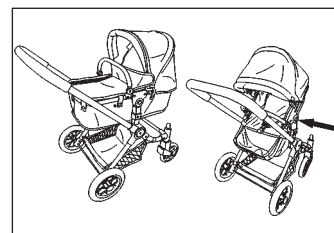

7. Carry cot change to sitting seat:
Take out the cot cover, buckle up the front and sides' fabric, push down the adjustable button to change to be a sitting seat position.