

# Assembly Instructions

Item no. 13.1014




## NOTE:


1. This stroller is not suitable for children younger than 3 years old.
2. This item is a toy and it's not suitable for carrying babies, children or pets.
3. Assembly should be carried out by an adult to prevent the item from collapsing during use.
4. Please remove all package before giving this item to your children.

**Skrållan**<sup>®</sup>


Head office, Sweden: Micki Leksaker AB, Industrivägen 7, SE-355 73 Gemla  
Phone +46 [0]470 70 41 50, info@micki.se, www.skrallan.se

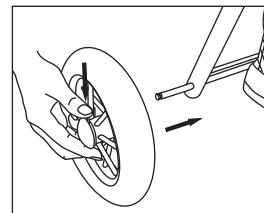


1. Put the two axles through the holes on the frame and then put the wheels on the axles by pressing to fix them firmly.

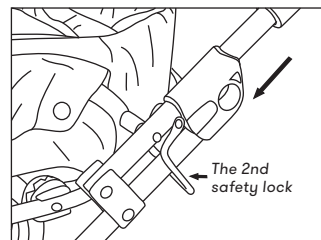


3. After unfolding, slide down the upper joints at the two ends of the handle until fasten to the top of the front tubes. Ensure that the 2nd safety lock on each side have been inserted into the front tubes.

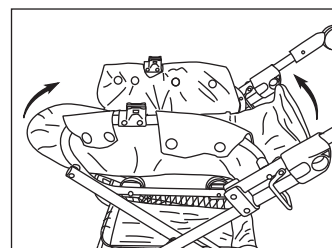


5. Footrest and backrest can be moved up and down as shown.

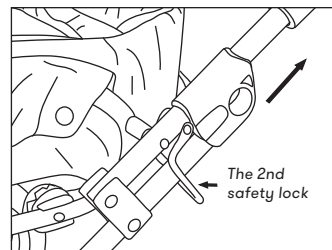


7. When folding down, pull up the 2nd safety lock on each side. Move up the upper joints at two ends of the handle until they part from the top of the front tubes as shown.

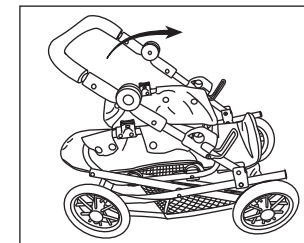

2. Unfold the stroller.

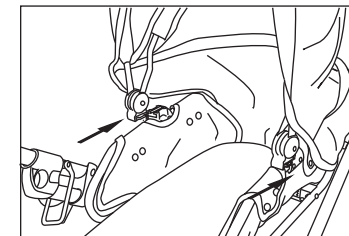

4. Slip the canopy connectors through the plastic profiles located on the base of the stroller to fix the canopy, ensure the runners level to the rivet cap.

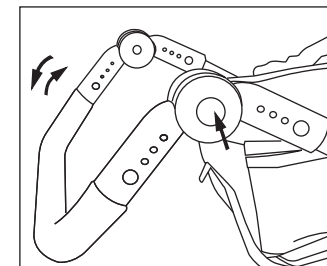

6. Adjust the height of the handle as you like by pressing the 2 buttons located on each side of the handle.